

DIRECTIONS FOR USE

Helimel

Ref 1482/1485

Non contractual photograph

THOMAS APICULTURE

ZA de l'Evangile 321 rue Bernard de la Rochefoucauld 45450 Fay-Aux-Loges FRANCE Tél: +33 (0)2 38 46 88 00 Fax : +33 (0)2 38 59 28 28 E-mail : <u>contact</u>@thomas-apiculture.com

www.thomas-apiculture.com

The Helimel was especially conceived to decrystallize cold honey and produce creamy honey.


Technical data				
Height: 2, 58 m				
Width: 0, 70 m				
Motor:				
Ref. 1482 (avec Viscomel): three-phase 380 V – 3370 W				
Ref. 1485: three-phase 380 V – 750 W				
Weight:				
Ref. 1482 (with Viscomel): 310 kg				
Ref. 1485: 55 kg				

How to use


ATTENTION: Before connecting the switch plug, make sure the wiring is in accordance with current standards (differential circuit breaker, earth wire...).

Check on voltage.

The machine may contain residual iron filings and chips: clean up before first use.

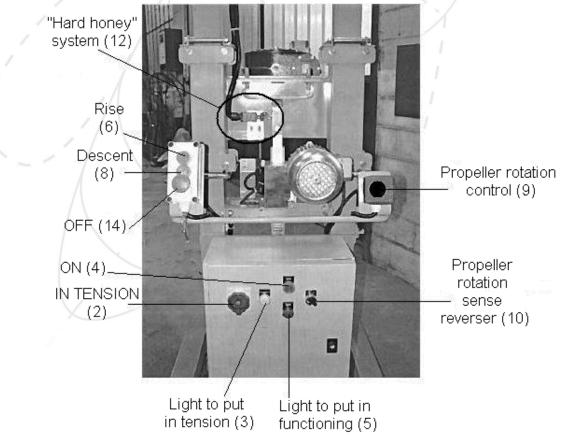

Non contractual documentation. Data can be modified without notification.

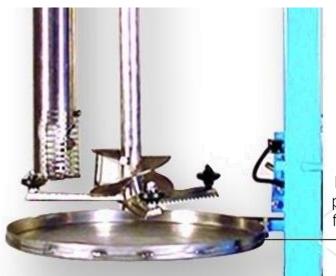

Receptacle which prevent the honey flow on the ground (16)

Stainless steel propeller (1)

Functioning

The Helimel is equipped with a stainless steel propeller (1) which permits joint the crystallized cold honey. Thanks to this scraping, the honey becomes pasty and can be melted quickly in order to obtain a liquid honey or else refined by a mixer to become creamy, fine and without grain.

The machine is equipped with a receptacle which permits to prevent the honey flow on the ground (16).

Option

The machine can be delivered with the Viscomel, which permits to evacuate the honey progressively during the de-crystallization (Ref. 1482).

Directions for use

Connect the machine with the alimentation.


Put the machine in tension activating the button (2) which is planned for this effect: a light (3) lights. Press the button ON (4): the light ON (5) has to light. If not, disconnect the machine and reverse 2 phases in the plug (the machine is equipped with a phase sense regulator).

Press the rise button (6): the machine rises and is stopped automatically once in contact with the "end race" system (high level) (7).

Non contractual documentation. Data can be modified without notification.

Put the drum under the machine and strap it up strongly. Press the descent button (8), the machine goes down again. Press the button which activates the propeller rotation (9). Activate the working sense reverser (10).

ATTENTION: For safety measures, a height drum detection system (11) doesn't permit the propeller rotation before that one is into the drum.

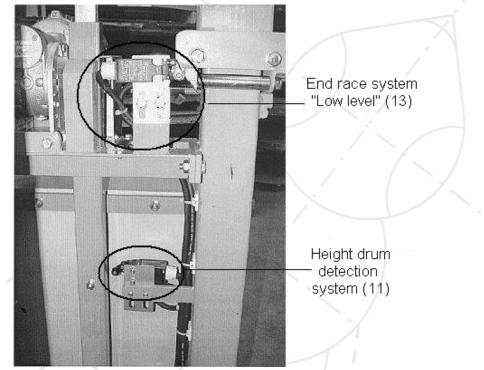

When the propeller gets in contact with a hard honey cover, a second security system ("hard honey" system) (12) stops the propeller descent in the drum. This one continues its rotation to scrap the honey cover.

Once this one is sufficiently jointed, the machine continues its descent.

Another "end race" system (13) ("low level") stops automatically the propeller descent before this one reach the bottom of the drum.

In order to stop the machine, activate the button ON (4).

The Helimel is equipped with a security system with pendulum (15) which permits to stop the machine in case of intensive effort or badly strap up drum.




Security system with pendulum (15)

Care and maintenance

ATTENTION: Disconnect the switch plug before care and maintenance. Protect the electric parts while cleaning. Clean up with hot water.

The Helimel is a seasonal occupancy material but it has to function regularly all along the year (at least some minutes a month).

Preferably store in dry place.

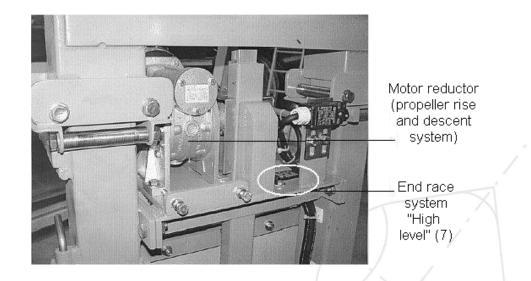

Problems - Solutions

ΔΤΤΕΝΤΙΟΝ·Γ	Disconnect the	machine	hoforo	maintenance	
ATTENTION. L		machine	Delore	maintenance	•

Problems	Possible solutions			
1 1	- Check on connection.			
/	- Check on the electric state (possible power failure).			
	- Check the circuit's breakers of the propeller and of the rise/descent			
The machine doesn't function	system.			
	- Check the state of the fuses into the control case.			
	- Check that the button OFF (14) is well unlocked (unlock it turning it to			
1 1/	the right).			
The light ON doesn't lights	- Disconnect the machine than change the phase in the plug (the			
The light on doesn't lights	machine is equipped with a phase sense controller).			

If the problems persist, please contact our After Sales Service:



After-sales service: Weekdays 00 33 2 38 46 88 00 8.00 AM – 12.00 2.00 PM – 5h30 PM e-mail: <u>contact@thomas-apiculture.com</u>

Non contractual documentation. Data can be modified without notification.